


Lubricate & Clean the Air Motor

Step 1: Detached **Air Motor** from unit tubing.

Step 2: Wipe Parts with Alcohol.

Step 3: Place Lubricant (2 or 3 drops) into the Air Drive Port on the Air Motor.

(See Figure #1) (See Figure #2)

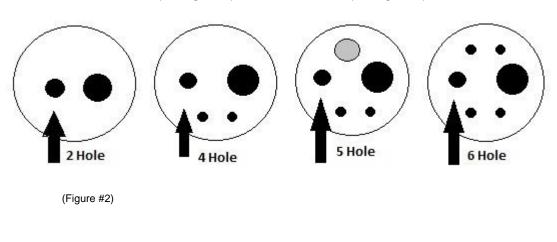



- Step 4: Attach the Air Motor to unit tubing & Run for 30 Seconds to Distribute Lubricant.
- Step 5: As a Preventative Measure, Place Lubricant (2 3 Drops) to Forward/Reverse Switch, Shift Rings, and Sheath Attachment Points.
- Step 6: Wipe Away all Excess Lubricant.
- Step 7: Repeat Steps 3 6.



Air Driven Motor Maintenance Procedure

We Recommend:

Soaking your Handpieces in Lubricant Overnight; at Least Once a Month.

This will help Remove Stuck on Debris & Saturate Bearings with Lubricant, for longer life.

www.mcshandpiece.com/lubricating-procedure

Helpful Links:

We have lots of extremely useful information on our website: www.mcshandpiece.com

For an In-depth Look at Handpiece Maintenance:

www.mcshandpiece.com/maintenance

Cause & Effect of Excessive Pressure Applied to the Bur:

www.mcshandpiece.com/cause-effect-excessivepressureappliedtobur

Understanding High Speed Bearings:

www.mcshandpiece.com/understanding-high-speed-bearings

How to Free Spin Your Turbine:

www.mcshandpiece.com/free-spin

Handpiece Lubricating Procedure:

www.mcshandpiece.com/lubricating-procedure

Chuck Mechanism Cleaning Procedure:

www.mcshandpiece.com/chuck-brush-procedure

Specialized Maintenance Procedures:

Highspeed's: www.mcshandpiece.com/highspeed-maintenance Low Speed's: www.mcshandpiece.com/low-speed-maintenance

Electric Air Powered Highspeed's: www.mcshandpiece.com/electric-airpowered-maintenance

Air Motors: www.mcshandpiece.com/air-motor-maintenance

Accessories & Other Purchases:

www.mcshandpiece/products